


Measuring Instructions for Cellular Sliders


Inside Mount Instructions - Width

- Use a steel measuring tape and measure to the nearest 1/8".
- Measure the exact width (left to right) of the inside edge of the window frame in 3 places (top, middle, bottom).
- Take the **shortest** of the 3 measurements.
- This is the width measurement you will order; width is always the first measurement recorded.
- Your window must have a minimum depth of 3/4" for the mounting brackets.
- The manufacturer will deduct 1/4" to 3/4" total, from the width, to ensure proper fit.

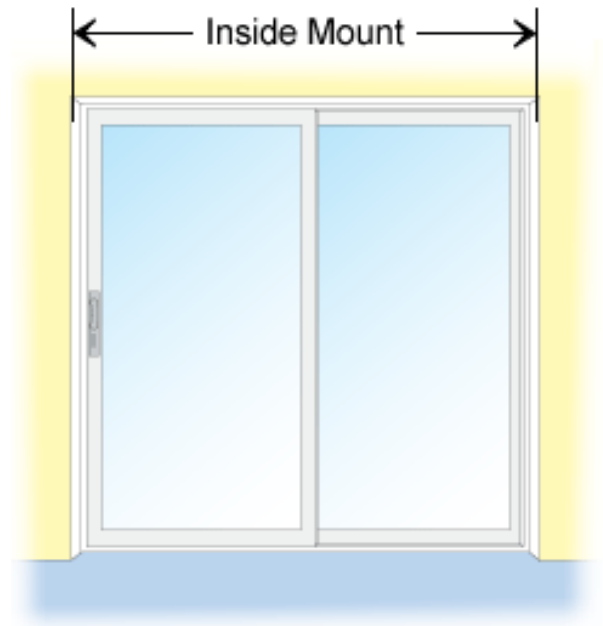

Inside Mount Instructions - Height

- Measure the exact height (top to bottom) from the top inside edge down to the window sill in 3 places.
- Take the **shortest** of the 3 measurements.
- This is the height measurement you will order; height is always the second measurement recorded.
- The manufacturer will take 1/4" to 1/2" deduction to allow for clearance.

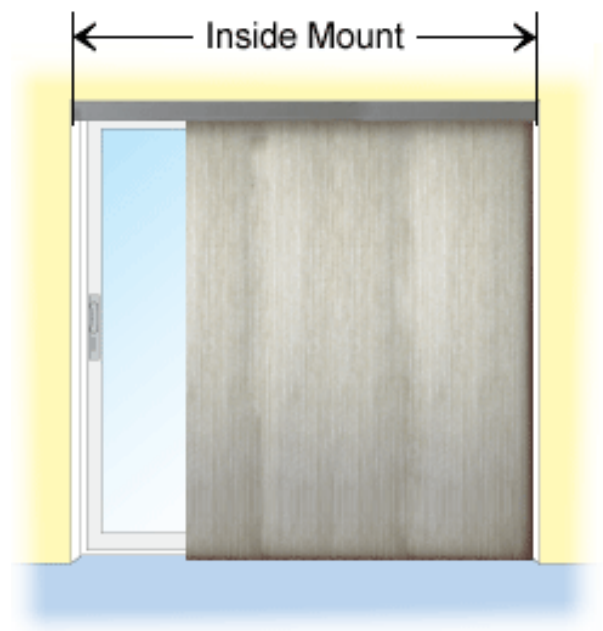


* Do not transpose width and height measurements. *

* Finished blind size may vary +/- 1/8". *


Outside Mount Instructions - Width

- Measure the exact width (left to right) of the window frame or how wide you would like the blind to be.
- Make sure to measure wide enough to cover the entire window and provide for minimum light gap; we recommend adding 6" to 8". Example: if the window opening is 70", by ordering 76" it will provide 3" coverage on each side of the window.
- This is the width measurement you will order; width is always the first measurement recorded.
- If you specify outside mount, the manufacturer will not take any additional deductions.

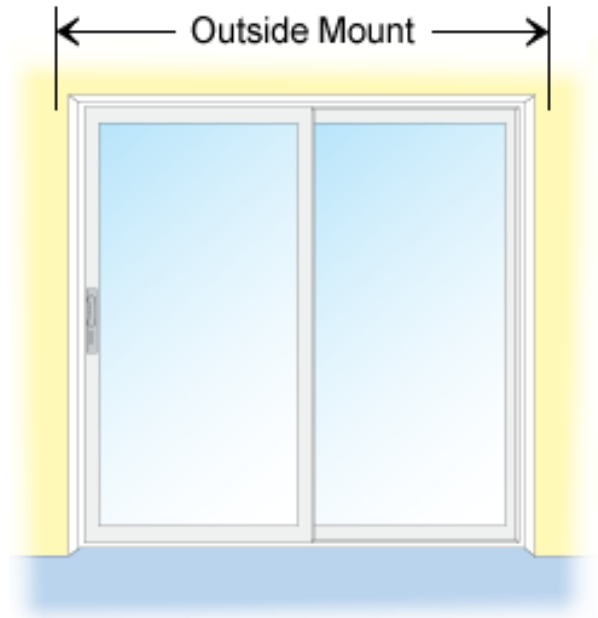

Outside Mount Instructions - Height

- Measure the exact height (top to bottom) from the top inside edge down to the window sill in 3 places.
- We recommend adding about 4" to 6" to this number to ensure maximum coverage and to accommodate the headrail.
- The height measurement you provide must include the headrail. Example: if the height ordered is 80" this will be the height including the headrail (from the very top of the headrail to the bottom rail).
- You will mount the headrail on, above or beyond the window frame.
- Some windows have decorative trim which may interfere with mounting; it's important to add to your measurement to mount above the trim. Remember to request extension brackets.
- If the blind extends to the floor for a patio door, deduct at least a 1/2" from your measurement to allow clearance for the vanes.

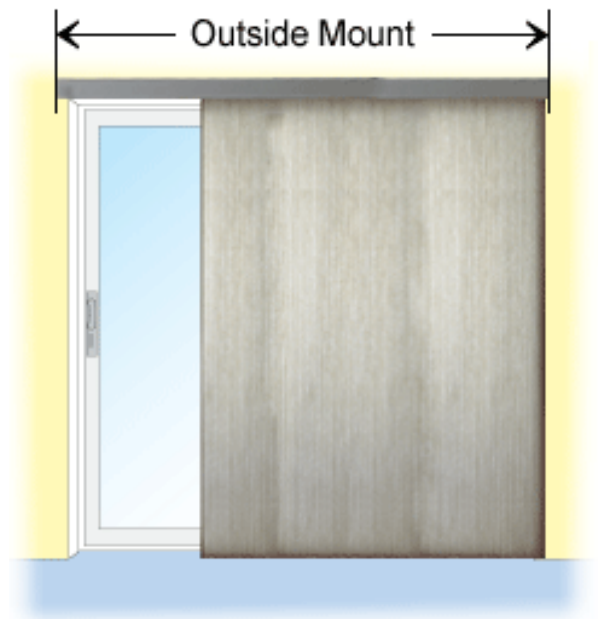

*** Do not transpose width and height measurements. ***

*** Finished blind size may vary +/- 1/8". ***